



SLAT KIT SET OF 2

ATLANTIC
FURNITURE


ASSEMBLY INSTRUCTION

(TWIN 65200)

Before assembling your Bed slat kit, please read through these instructions carefully, familiarising yourself with the different parts. Please note that you will require a Phillips head screwdriver.

01 SLAT KIT 2 SET

PARTS LIST

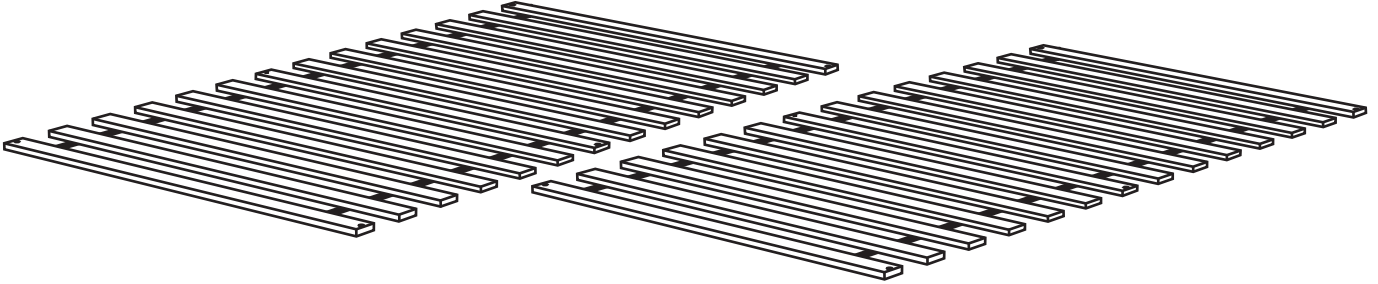

A



1 1/4" wood screw - 12 pcs
For slat kit to ledger strip

HARDWARE

Step 1


Assemble Bunk Bed according to assembly instructions.

Step 2

Lay the slat kit onto the Bunk Bed.



Assembling by adult

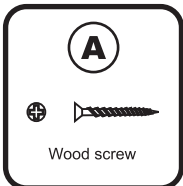

Wood screw



Screw slat kit (01) to ledger strip,
using wood screw (A).

Tighten with Phillips head screwdriver.
Be sure the space between slats is even.