



CONCORD HEAD RAIL

ATLANTIC
FURNITURE

ASSEMBLY INSTRUCTIONS

Before assembling your Concord head rail, please read through these instructions carefully, familiarize yourself with the different parts.

PARTS LIST

- 1 MID RAIL 1 PC
- 2 LEFT LEG 1 PC
- 3 RIGHT LEG 1 PC

Instructions apply for all sizes of bed
> Twin > Full > Queen

HARDWARE

- a JCB M6 X 120mm(4 3/4") - 2 pcs
Spare - 1 pc
- b JCB M6 X 70mm(2 3/4") - 4 pcs
Spare - 1 pc
- c Barrel Nut - 6 pcs
Spare - 2 pcs
- d Allen Wrench - 1 pc
Spare - 1 pc


NOTE : WE INCLUDE SPARE HARDWARE IN CASE THE ALLEN WRENCH, JCB, OR BARREL NUT ARE DAMAGED DURING ASSEMBLY.

Step 1


Attach the legs (2)(3) to mid rail (1), using JCB M6 X 120mm (a) and barrel nut (c). Tighten with the Allen wrench (d).



Adult Assembly

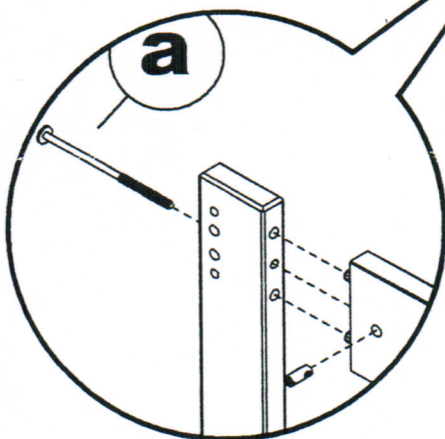

Step 2

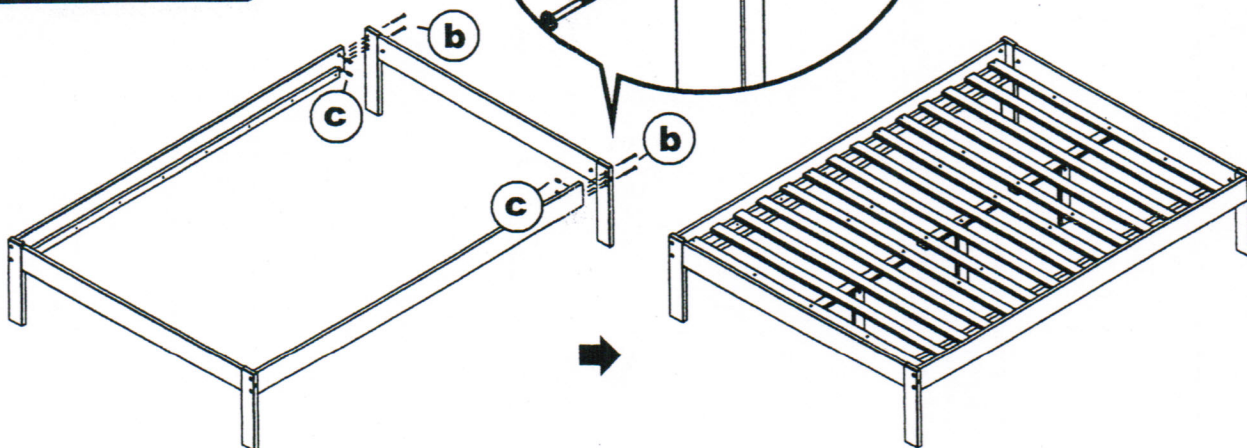

Attach bed frame assemblies to the head rail assemblies, using JCB M6 X 70mm (b) and barrel nut (c) as shown. Tighten with allen wrench (d). For Slat kit assembly, follow assembly instructions included with slat kit.

Page 1 of 1