



MADISON HEADBOARD

ATLANTIC
FURNITURE

ASSEMBLY INSTRUCTIONS



Before assembling your Headboard, please read through these instructions carefully, familiarize yourself with the different parts.



TWIN

PARTS LIST

- ① HEADBOARD PANEL 1 PC
- ② LEFT LEG 1 PC
- ③ RIGHT LEG 1 PC

HARDWARE

- ①  JCB M6 X 120mm(4 3/4") - 4 pcs
Spare - 1 pc
- ②  JCB M6 X 70mm(2 3/4") - 4 pcs
Spare - 1 pc

- ③  Barrel Nut - 8 pcs
Spare - 2 pcs
- ④  Allen Wrench - 1 pc
Spare - 1 pc

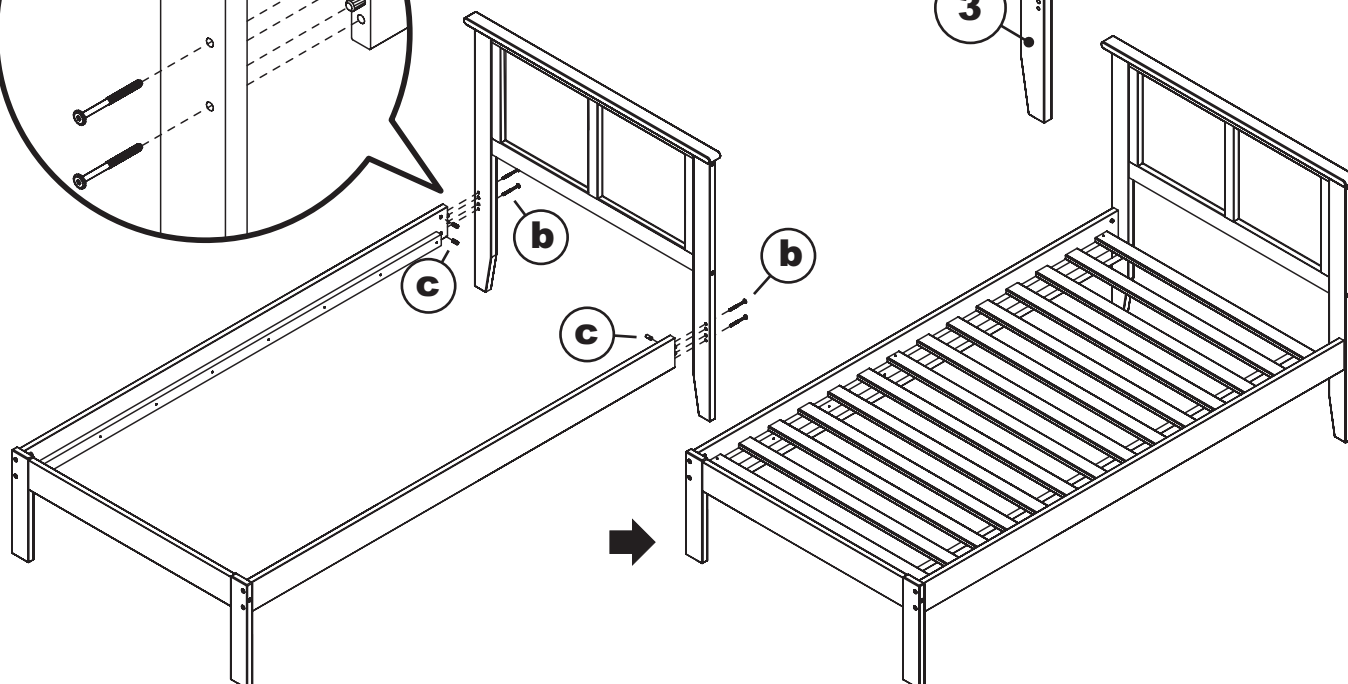
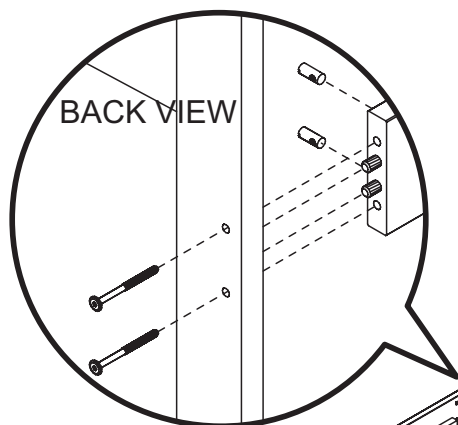
NOTE : WE INCLUDE SPARE HARDWARE IN CASE THE ALLEN WRENCH, JCB OR BARREL NUT ARE DAMAGED DURING ASSEMBLY.

Step 1

Attach the legs (2)(3) to headboard panel (1), using JCB (a) and barrel nut (c). Tighten with the Allen wrench (d).



Step 2



Attach bed frame assemblies to the headboard assemblies, using JCB M6 X 70mm (b) and barrel nut (c) as shown. Tighten with allen wrench (d). For Slat kit assembly, follow assembly instructions included with slat kit.