



PORTLAND HEADBOARD

ATLANTIC
FURNITURE

ASSEMBLY INSTRUCTIONS

Before assembling your Headboard, please read through these instructions carefully, familiarize yourself with the different parts.

Instructions apply for all sizes of bed
> Twin > Full > Queen > King

PARTS LIST

- ① HEADBOARD PANEL 1 PC
- ② LEFT LEG 1 PC
- ③ RIGHT LEG 1 PC
- ④ SPACER BLOCK 2 PCS

HARDWARE

- ① a WOOD DOWEL - 2 pcs
Spare - 1 pc
- ② b JCB M6 X 90mm(3 1/2") - 4 pcs
Spare - 1 pc
- ③ c JCB M6 X 70mm(2 3/4") - 4 pcs
Spare - 1 pc
- ④ d JCB M6 X 50mm(2 ") - 4 pcs
Spare - 1 pc
- ⑤ e Barrel Nut - 8 pcs
Spare - 2 pcs
- ⑥ f Allen Wrench - 1pc
Spare - 1pc


NOTE : WE INCLUDE SPARE HARDWARE IN CASE THE ALLEN WRENCH, JCB BARREL NUT, SPLIT OR FLAT WASHER ARE DAMAGED DURING ASSEMBLY.

Step 1


Attach the legs (2)(3) to headboard panel (1), using wood dowel (a), JCB (c) and barrel nut (e). Attach spacer block (4) to the headboard panel (1), using JCB (d). Tighten with the Allen wrench (f).



Step 2

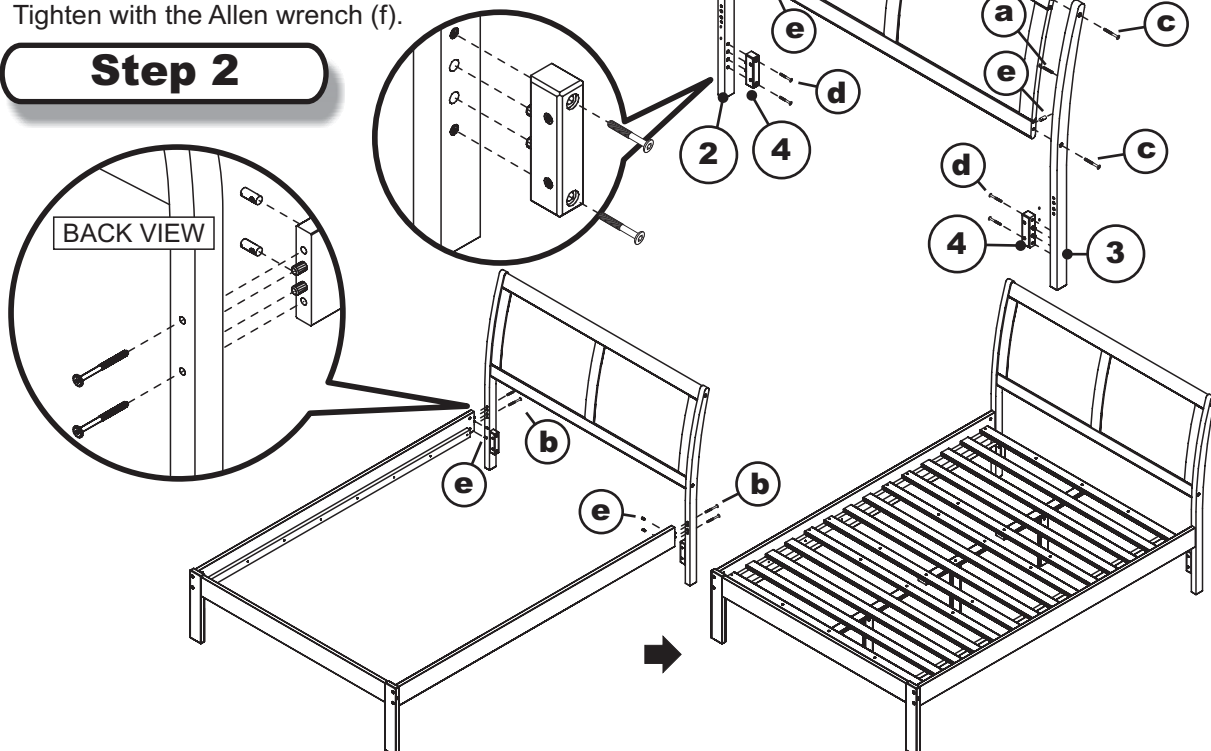

Attach bed frame assemblies to the headboard assemblies, using JCB M6 X 90mm (b) and barrel nut (e) as shown. Tighten with allen wrench (f). For Slat kit assembly, follow assembly instructions included with slat kit.

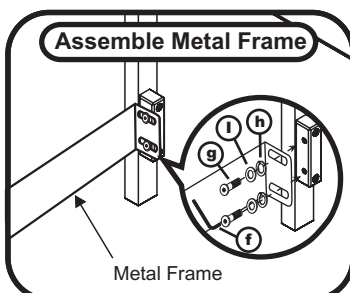

HARDWARE

For Headboard to Metal Bed Frame

- ① g 1" Allen Bolts - 4 pcs
Spare - 1 pc
- ② h Split Washer - 4 pcs
Spare - 1 pc
- ③ i Flat Washer - 4 pcs
Spare - 1 pc