



SLAT KIT FOR UPPER BUNK

ATLANTIC
FURNITURE

ASSEMBLY INSTRUCTION


(FULL 65300)

Before assembling your Bed Slat Kit, please read through these instructions carefully, familiarising yourself with the different parts.


Please note that you will require a Phillips head screwdriver and an Allen wrench.

PARTS LIST

- | | | |
|-----------|-----------------------|---------------|
| 01 | SLAT KIT | 2 SETS |
| 02 | CENTER SUPPORT | 2 PCS |

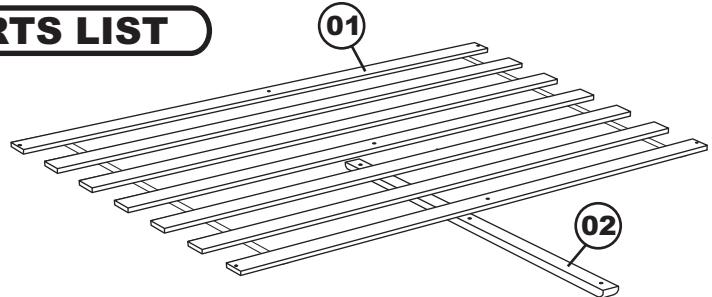

HARDWARE

- A**  JCB M6 35mm - 6 pcs
For Slat to Center support


- B**  1 1/4" Wood screw - 8 pcs
For Slat kit to Ledger strip

- C**  Allen Wrench - 1 pc


Step 1

Assemble Bed Frame according to bed assembly instructions.


Step 2



Lay the Slat kit onto the bed as shown.
Attach Center support (02) assemble to Slat kit (01).
Using JCB (A), tighten with the Allen wrench (C).
Repeat for section 2.

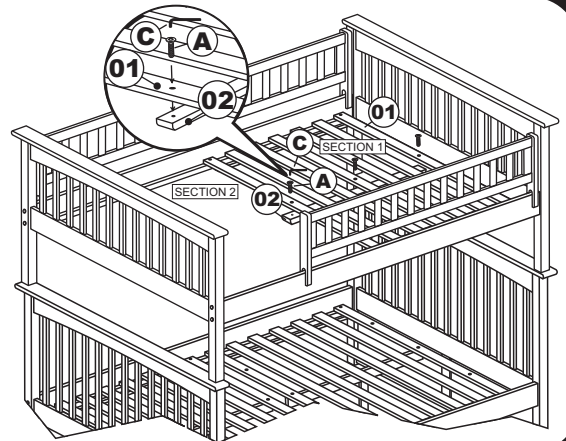

Step 3

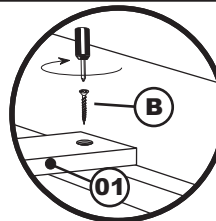

Screw slat kit (01) to ledger strip, using wood screw (B).
Tighten with Phillips head screwdriver.
Be sure the space between slats is even.

