

Size of Mattress and Foundation

The length and width of the upper bunk mattress and foundation are as follows :

Length
74" - 75"

Width
37 1/2" - 38 1/2"

Thickness
9 1/2" max

You must use only this size mattress.

Ensure thickness of mattress and foundation combined does not exceed 9 1/2" and that the mattress is at least 5" below upper edge of guardrails.

This Bunk Bed uses a slat kit for mattress foundation.

Replacement Parts

Replacement parts, including additional guardrails, may be obtained from any Atlantic Furniture dealer



SAFETY WARNINGS



- (1) Follow the information on the warnings appearing on the upper bunk end structure and on the carton. Do not remove warning label from bed.
- (2) Always use the recommended size mattress or mattress support, or both, to help prevent the likelihood of entrapment or falls.
- (3) Surface of mattress must be at least 5 in. (127mm) below the upper edge of guardrails.
- (4) Do not allow children under 6 years of age to use the upper bunk.
- (5) Periodically check and ensure that the guardrail, ladder, and other component are in their proper position, free from damage, and that all connectors are tight.
- (6) Do not allow horseplay on or under the bed, and prohibit jumping on the bed.
- (7) Always use ladder for entering or leaving upper bunk.
- (8) Do not use substitute parts. Contact the manufacturer for replacement parts.
- (9) Use of a night light may provide added safety precaution for a child using the upper bunk.
- (10) Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed must be placed against the wall to prevent entrapment between the bed and the wall.
- (11) The use of water or sleep flotation mattress is prohibited.
- (12) Prohibit more than one person on upper bunk.
- (13) **STRANGULATION HAZARD** : Never attach or hang items to any part of the Bunk Bed that are not designed for use with the bed: for example, but not limited to, hooks, belts and jump ropes.
- (14) Keep these instructions for future reference.



MISSION LOFT BED

ATLANTIC
FURNITURE

ASSEMBLY INSTRUCTIONS



TWIN

Thank you for choosing our new bunk bed.


This practical design offers the utmost in versatility.

Before assembling your Mission loft bed, please read through these instructions carefully, familiarize yourself with the different parts.

Please note that you will require a Phillips head screwdriver and an Allen wrench.

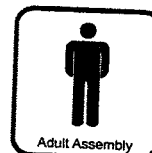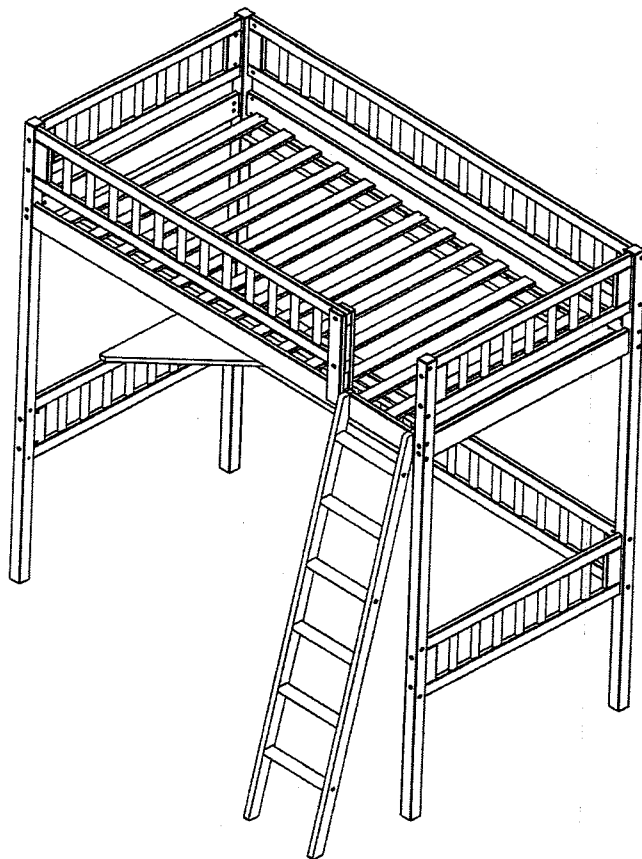

Adult Assembly

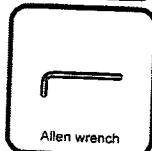

Allen wrench



Customer Supplied

Phillips Head
Screwdriver

HARDWARE

NOTE : WE INCLUDE SPARE HARDWARE IN CASE THE ALLEN WRENCH, JCB, BARREL NUT OR SCREW ARE DAMAGED DURING ASSEMBLY.



- A** JCB M6 X 3 1/2" (90mm) - 42 pcs
Spare - 2 pcs




- B** JCB M6 X 2 1/8" (55mm) - 2 pcs
Spare - 1 pc



- C** Barrel Nut - 42 pcs
Spare - 2 pcs



- D** Cap Nut - 2 pcs




- E** Wood Screw 1 1/4" - 2 pcs
Spare - 1 pc




- F** Black Drywall Screw 3/4" - 8 pcs
Spare - 2 pcs



- G** Wood Screw 5/8" - 2 pcs
Spare - 1 pc




- H** Metal U-Bracket - 4 pcs



- I** Allen wrench - 1 pc
Spare - 1 pc

MISSION LOFT BED

PARTS LIST


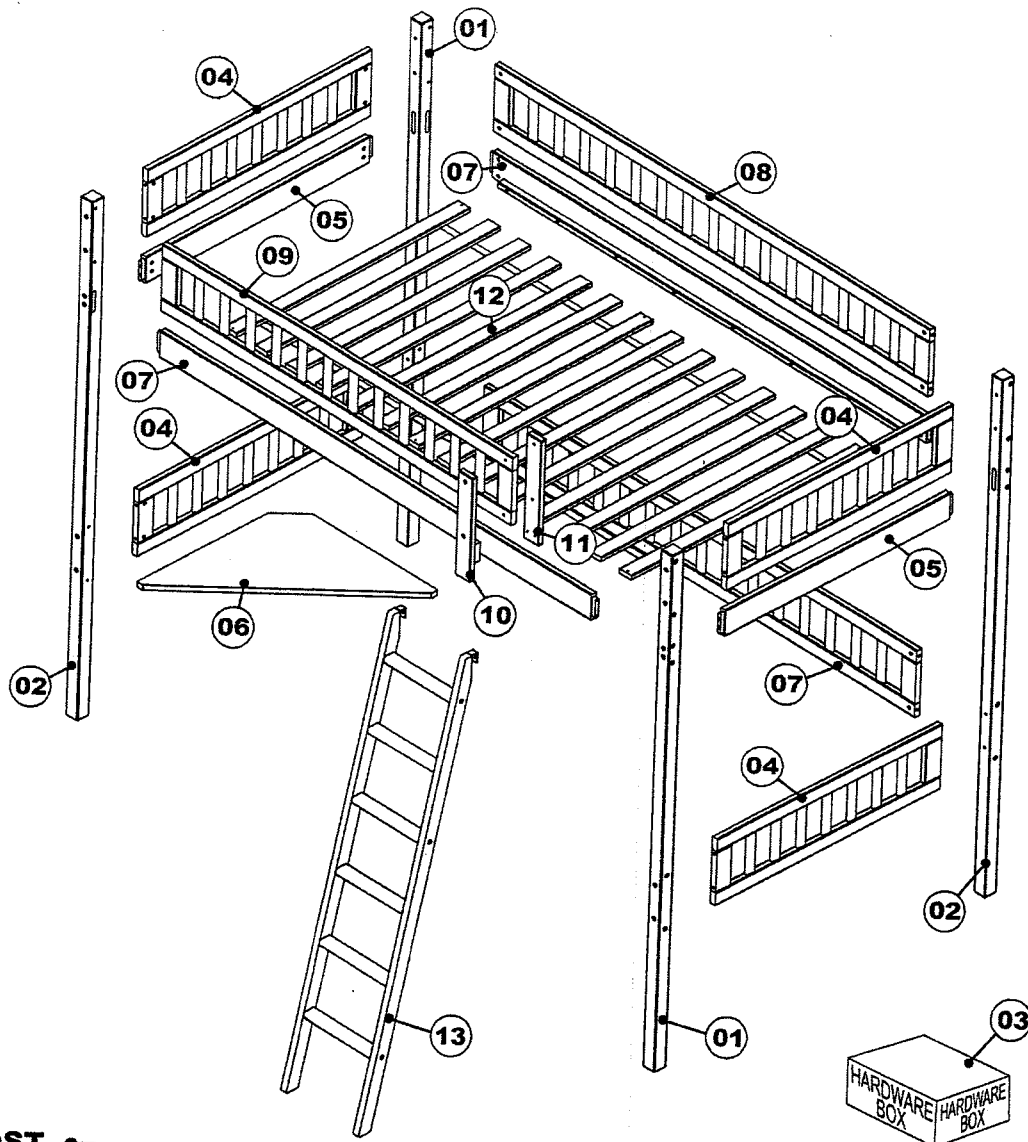


- | | | |
|------------------------|------------|-------------------------|
| 01 LEFT POST | BOX 1 OF 5 | LOFT BED TALL POST |
| 02 RIGHT POST | | |
| 03 HARDWARE | | |
| 04 SIDE GUARD RAIL | BOX 2 OF 5 | MISSION LOFT CROSS RAIL |
| 05 CROSS RAIL | | |
| 06 CORNER WORK STATION | | |
| 07 LONG RAIL | BOX 3 OF 5 | LOFT LONG & GUARD RAILS |
| 08 FULL GUARD RAIL | | |
| 09 3/4 GUARD RAIL | | |
| 10 FRONT END CAP | | |
| 11 REAR END CAP | BOX 4 OF 5 | |
| 12 SLAT KIT TWIN | BOX 5 OF 5 | |
| 13 LOFT LADDER | | |

MISSION LOFT BED



STEP 3

Attach the full guard rail (08) to the post assemblies as shown below, using JCB (A), and barrel nut (C). Tighten with the Allen wrench (I).

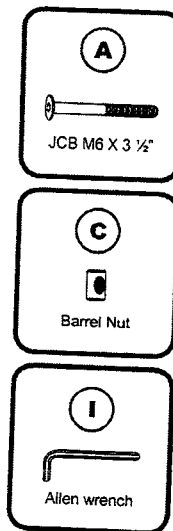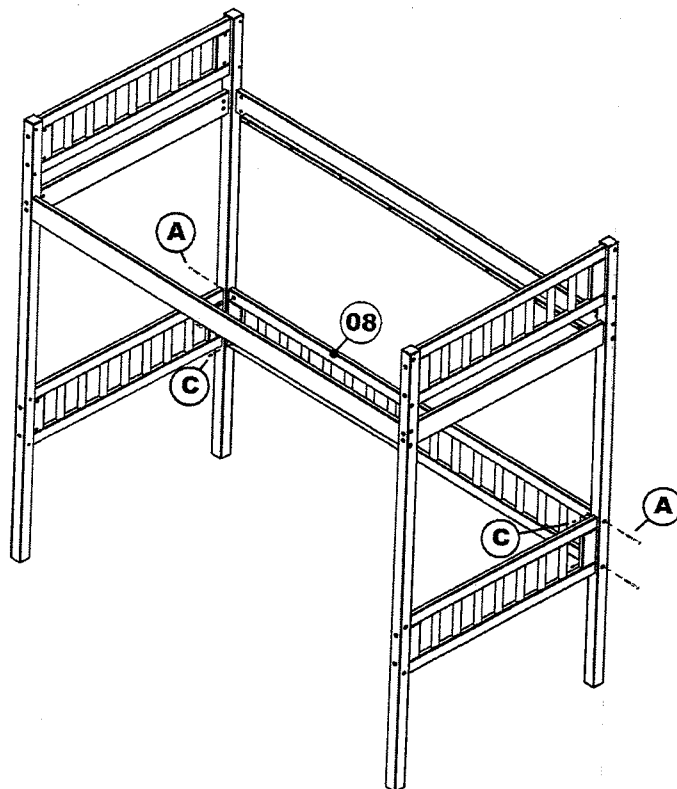





STEP 4

Lay the slat kit twin (12) onto the bed, and fix in place using wood screws provided in the slat kit box FOR SLAT KIT ASSEMBLY follow assembly instructions included with slat kit.

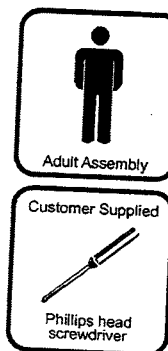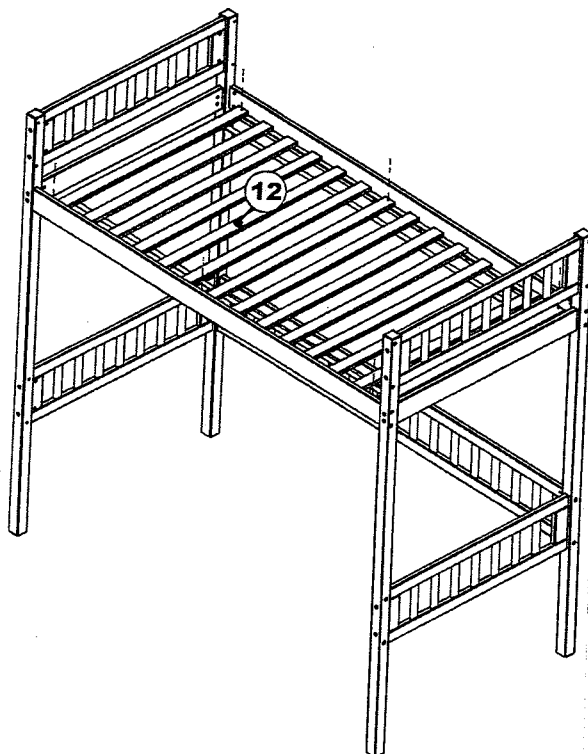


STEP 5

Attach front end cap (10) and rear end cap (11) to the 3/4 guard rail (09) as shown below. Using JCB (B) and cap nut (D). Tighten with the Allen wrench (I).

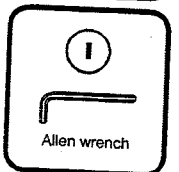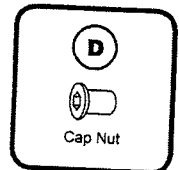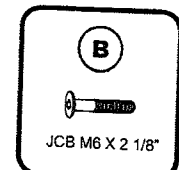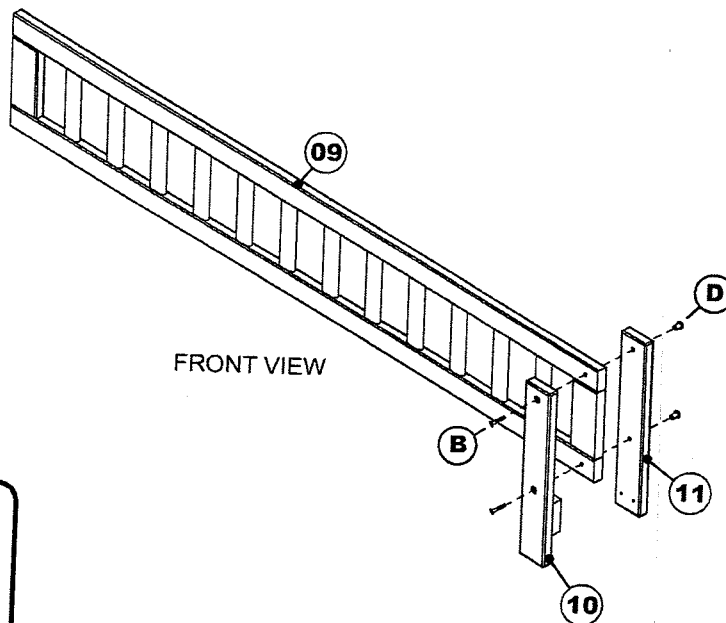

STEP 6





Attach full guard rail (08) and front guard rail assemblies (09) to the bed assemblies as shown below. Using JCB (A) and barrel nut (C). Tighten with the Allen wrench (I). Using wood screw (E) tighten with Phillips head screwdriver. (Customer supplied)

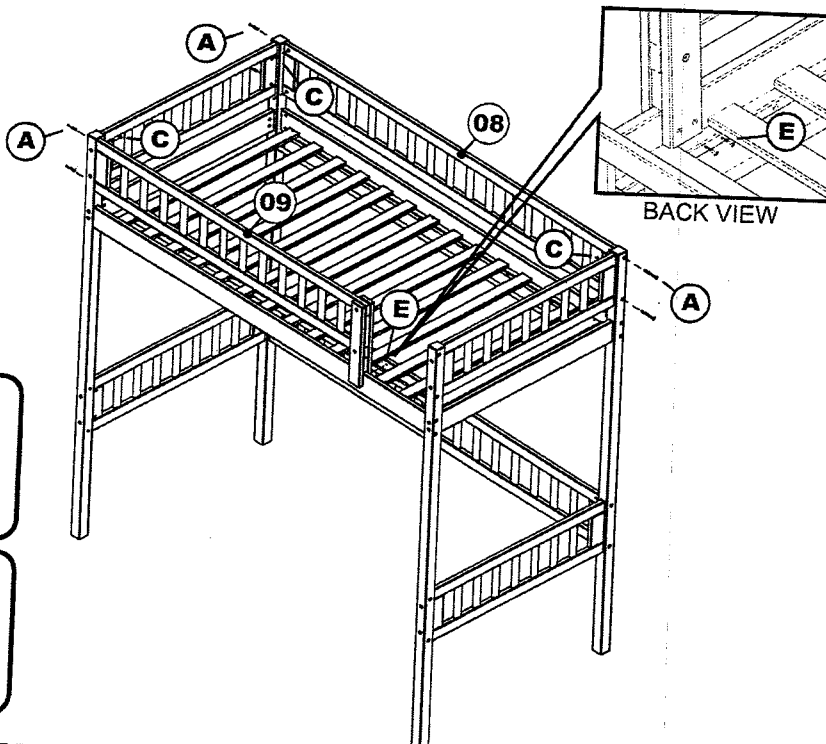

Customer Supplied





Phillips head
screwdriver

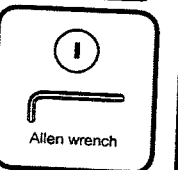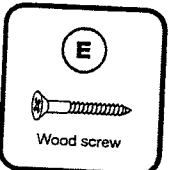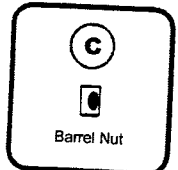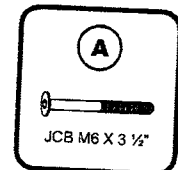

MISSION LOFT BED

STEP 7

Attach loft ladder (13) to the loft bed as shown below. Using wood screw (G). Tighten with Phillips head screwdriver. (Customer Supplied)

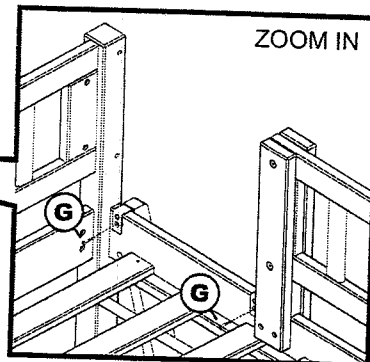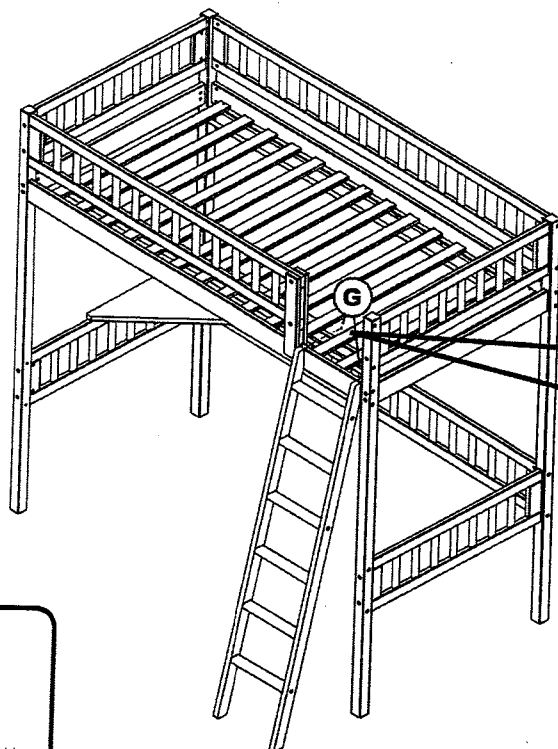

ZOOM IN

G



Wood screw


Customer Supplied



Phillips head
screwdriver



Adult Assembly

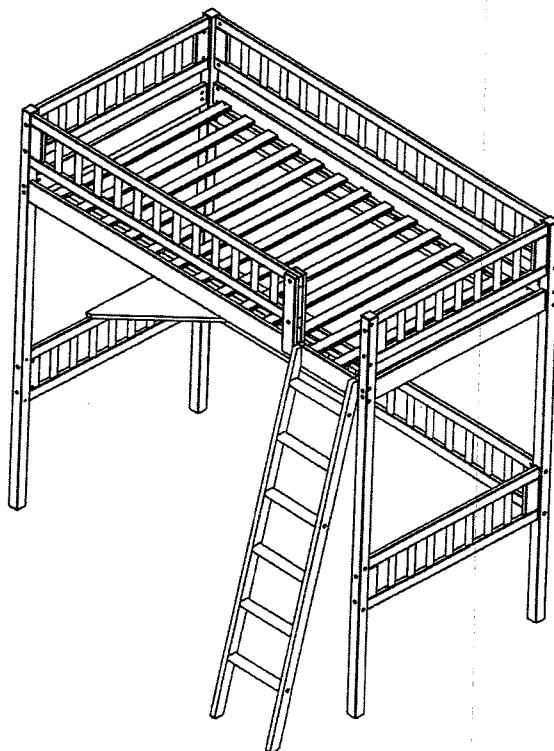

Congratulations !

Your Loft bed is now ready for use.

We recommend that you recheck that all screws are tight,
and that all parts are secure before use and periodically to ensure lasting Safety.