



# CAPTAIN'S BED


ATLANTIC  
FURNITURE

## ASSEMBLY INSTRUCTIONS

Thank you for choosing our new Captain's bed.  
This practical design offers the utmost in versatility.

Before assembling your Captain's bed, please read through these instructions carefully, familiarising yourself with the different parts.

Please note that you will require a Phillips head screwdriver.

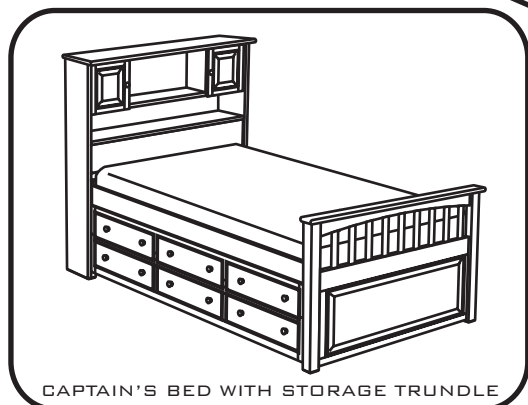

CAPTAIN'S BED WITH STORAGE TRUNDLE

Captain's bed with under bed chest.

To fix headboard to metal bed frame

**A**



1" Allen Bolts - 4 pcs.  
For Headboard to metal Bed Frame

**B**



Split Washer - 4 pcs

**C**




Flat Washer - 4 pcs

**D**




Allen Key - 1 pc

## HARDWARE

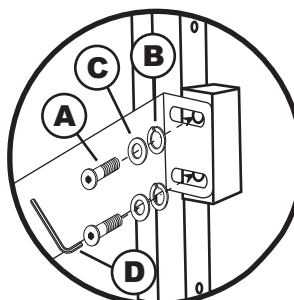


# PARTS LIST

- ① **HEADBOARD** • **BOX 1 OF 4**  
(Includes hardware to attach headboard to metal frame.)
- ② **FOOTBOARD** • **BOX 2 OF 4**
- ③ **LONG RAILS** • **BOX 3 OF 4**
- ④ **SLAT KIT** • **BOX 4 OF 4**

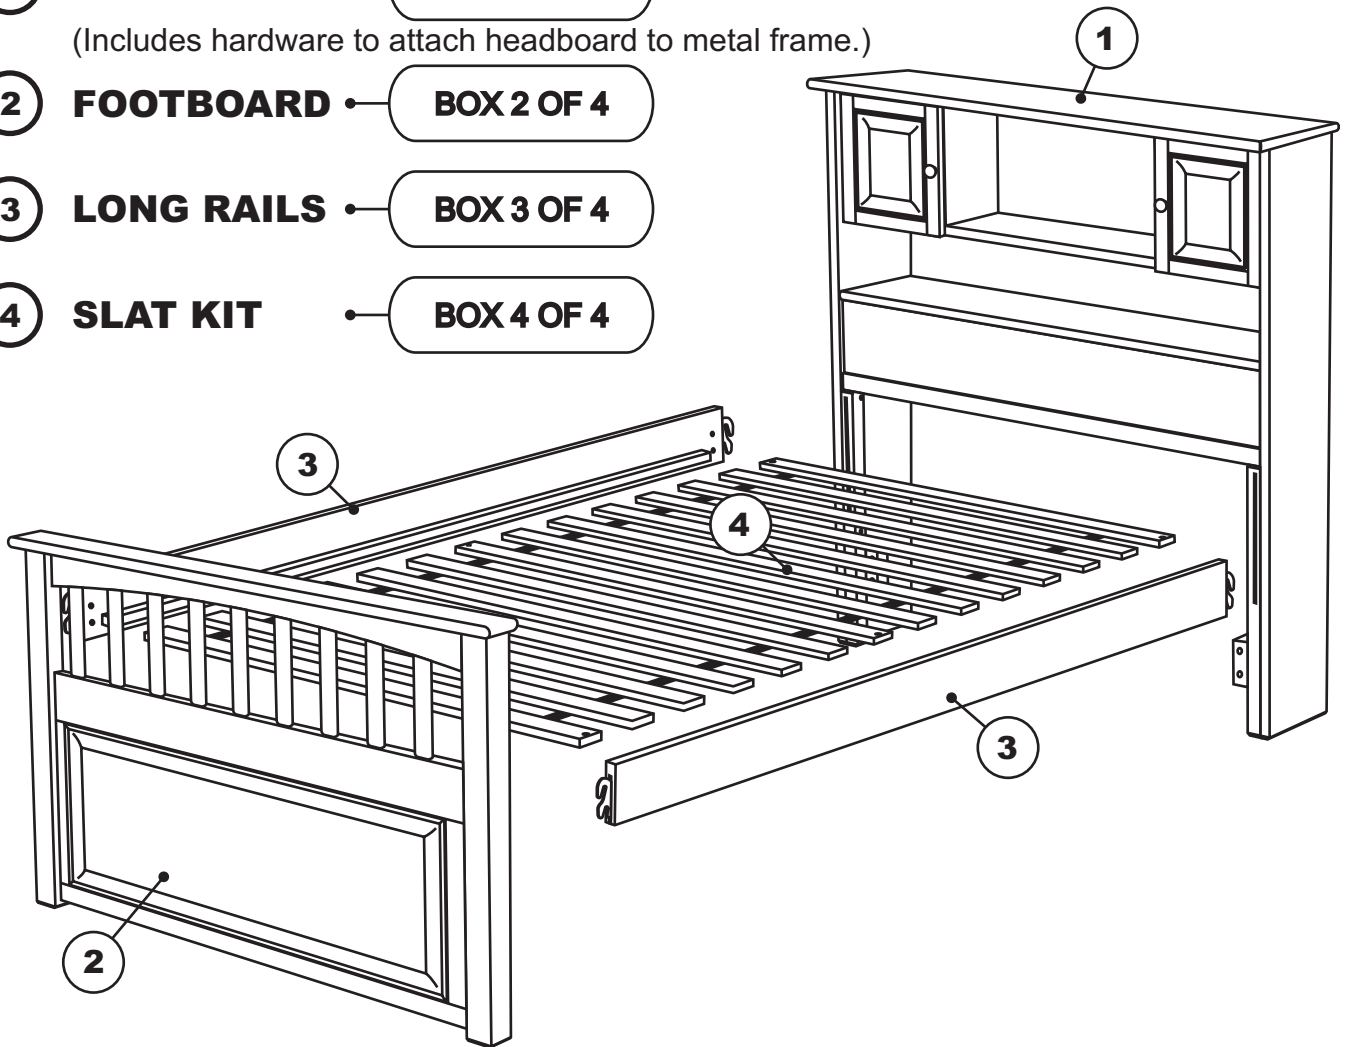


## STEP 1

Use the upper set of pins when using storage trundle or under bed chest and use the lower set of pins if using storage drawers or trundle bed.

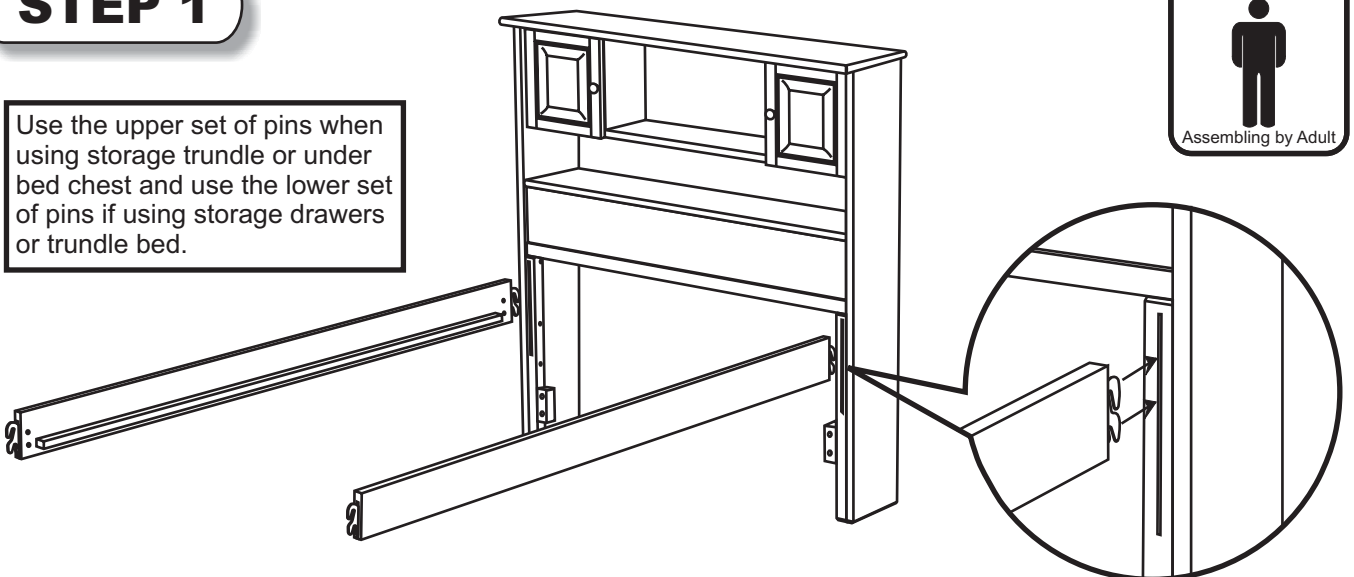


Attach the long rail (3) to headboard (1) using bed hook as shown.  
Repeat with the other long rail.

## STEP 2

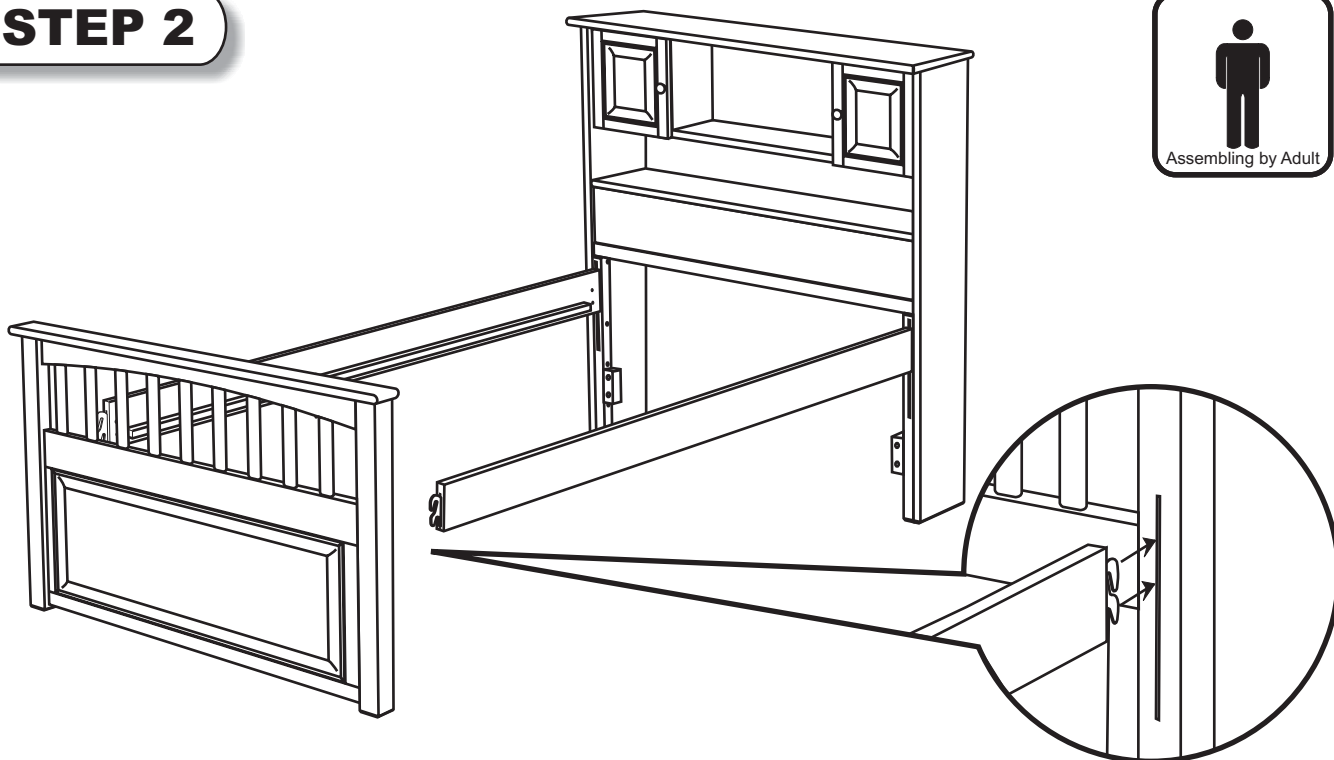

Attach the other end of the long rails(3) to the footboard(2) using bed hook as shown.

## STEP 3

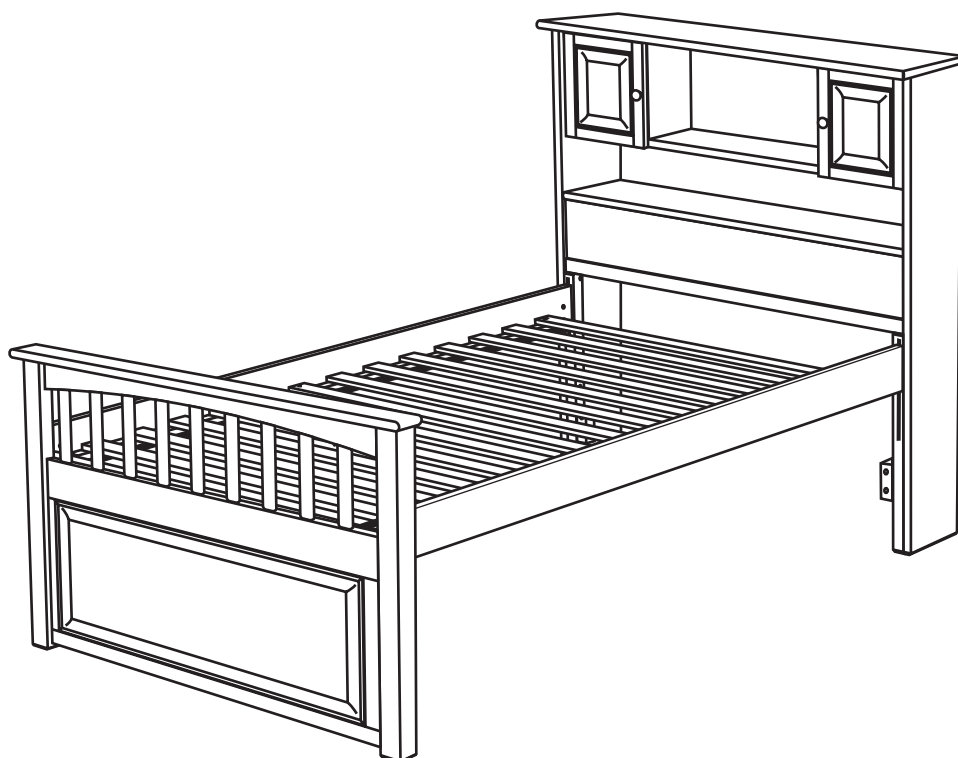

For slat kit assembly, follow Assembly Instruction included with slat kit.

**Congratulations !**

Your Captain's bed is now ready for use.

We recommend that you recheck that all screws are tightened  
and that all parts are secure before use.