



CAPTAIN'S BED HEADBOARD

ATLANTIC
FURNITURE

ASSEMBLY INSTRUCTIONS

(TWIN, FULL)

Before assembling your Captain's Bed Headboard, please read through these instructions carefully, familiarising yourself with the different parts.

Please note that you will require a Phillips Head Screwdriver and an Allen wrench.


Phillips Head
Screwdriver




Customer Supplied




Assembling by Adult

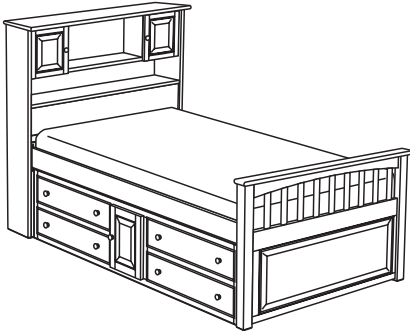

CAPTAIN'S BED WITH UNDER BED CHEST

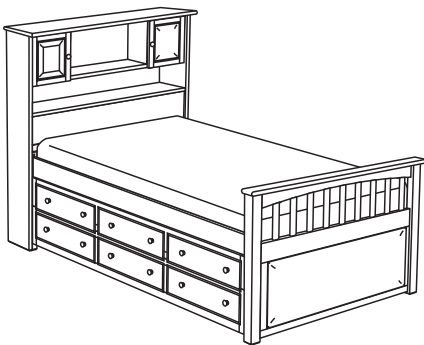

CAPTAIN'S BED WITH STORAGE TRUNDLE

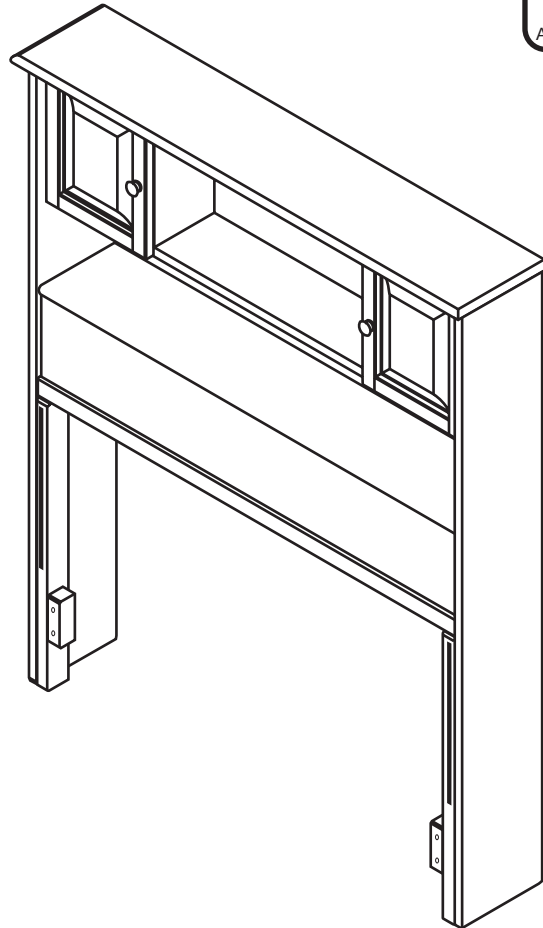

HEADBOARD HARDWARE




A WOODEN DOWEL 10 X 30mm - 12 pcs



B JCB M6 X 35mm - 8 pcs



C JCB M6 X 15mm - 24 pcs

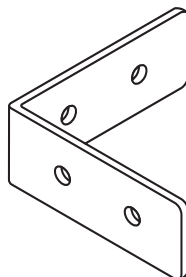

D METAL L BRACKET - 6 pcs



E WOODEN PULL - 2 pcs




F PULL SCREW - 2 pcs



G ALLEN WRENCH - 1 pc


HEADBOARD PARTS LIST

- | | | |
|-------------|-------------------------|--------------|
| (01) | HARDWARE | 1 BOX |
| (02) | TOP STORAGE | 1 SET |
| (03) | LEFT SIDE PANEL | 1 PC |
| (04) | RIGHT SIDE PANEL | 1 PC |
| (05) | LOWER SHELF | 1 PC |
| (06) | FRONT PANEL | 1 PC |
| (07) | PILLOW STOP | 1 PC |
| (08) | BACK PANEL | 1 PC |
| (09) | MOUNTING BLOCK | 2 PCS |

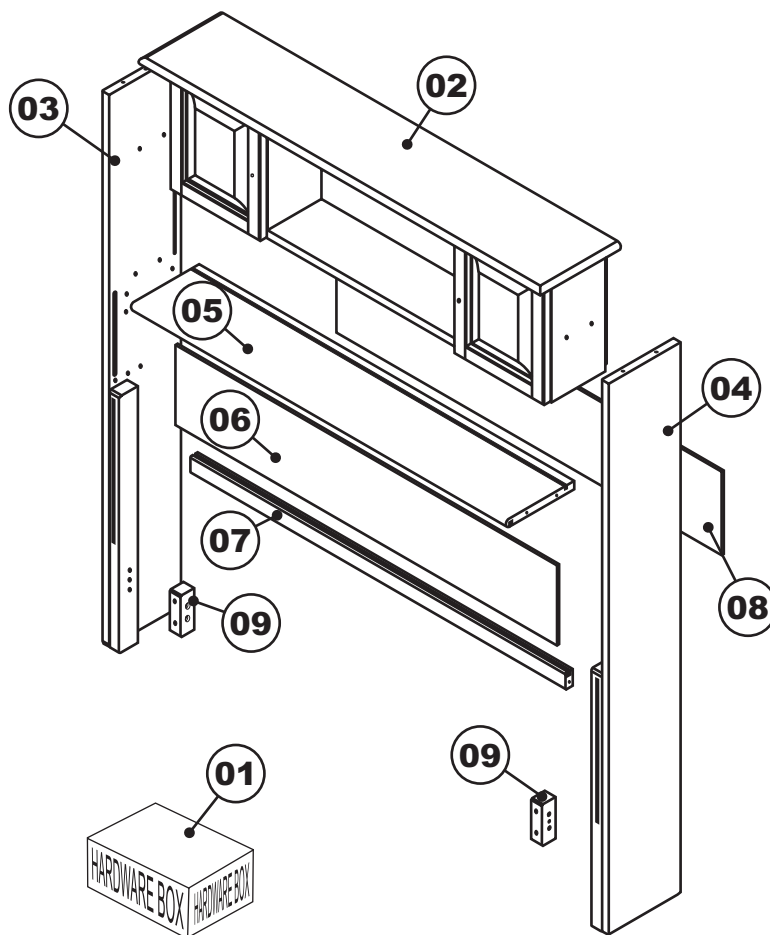


STEP 1

Insert Wooden Dowels (A), into the receiving holes in top edge of Side Panels (03)(04) as shown.

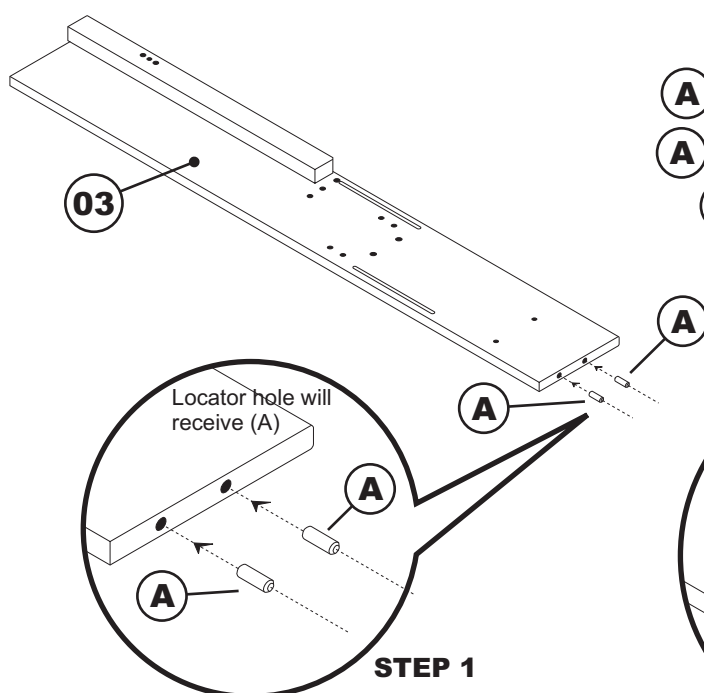



STEP 2

Insert Wooden Dowels (A), into the receiving holes in both ends of Lower shelf (05) as shown. Install metal L brackets (D) to the Lower Shelf (05), using JCB (C). Tighten with Allen wrench (G).


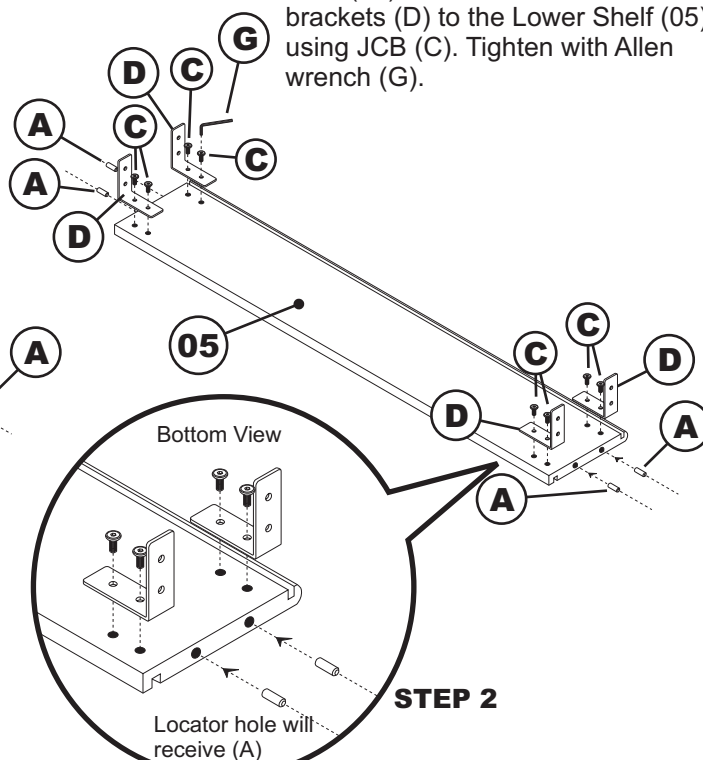


STEP 3


Insert Wooden Dowel (A), into the receiving hole in each end of Pillow stop (07) as shown. Install metal L brackets (D) to the Pillow stop (07), using JCB (C). Tighten with Allen wrench (G).

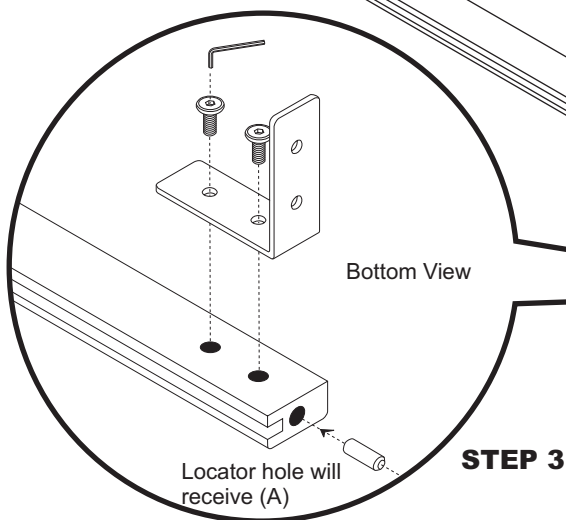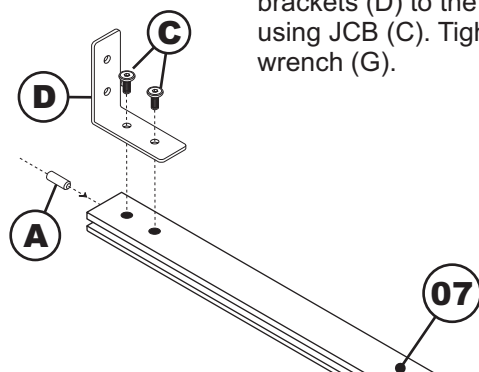**STEP 4**

Insert Wooden Dowel (A), into the receiving hole in each Spacer Block (09) as shown.

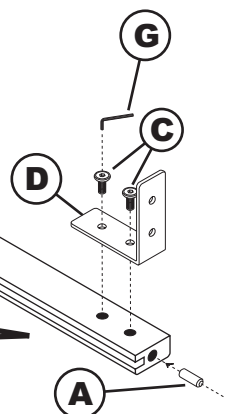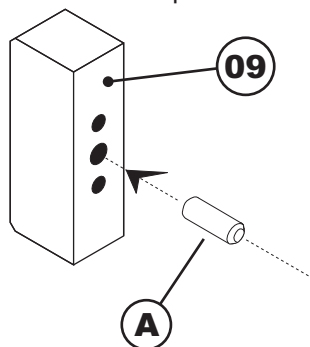
**STEP 5**

Attach the lower shelf (05), front panel (06), pillow stop (07) & back panel (08) to side panels (03)(04) as shown. Using JCB (C), tighten with Allen wrench (G). (Taking care to lay it on some cardboard to prevent scratching).

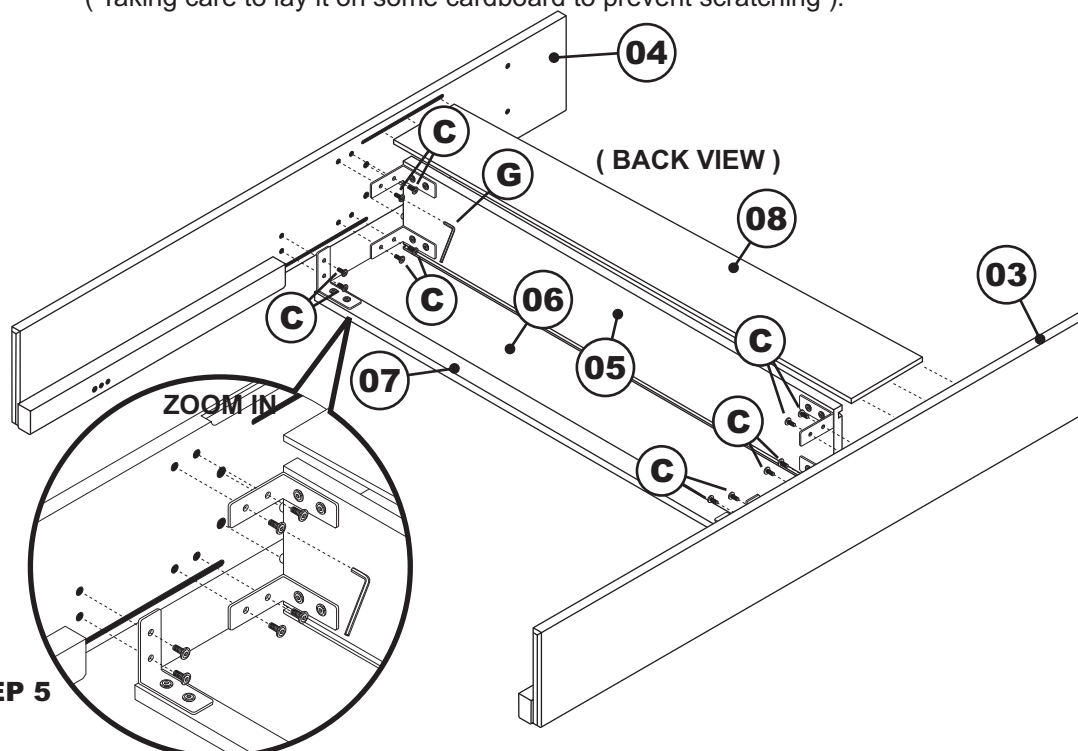


STEP 6

Lay the top storage (02) on the floor upside down, taking care to lay it on some cardboard to prevent scratching. Stand the side panel assembly upside down and using JCB (B), tighten with Allen wrench (G).

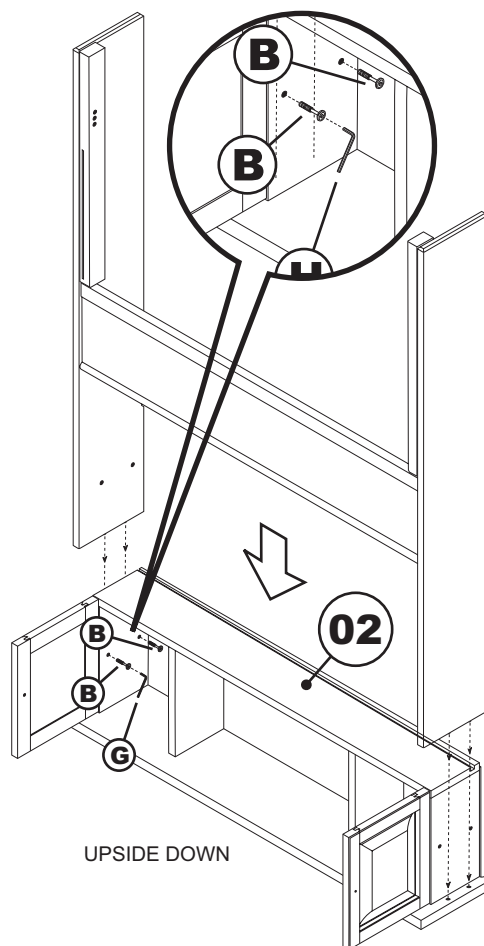

STEP 7


Install wooden pull (E) to each of the doors as shown. Using pull screws (F), tighten with Phillips head screwdriver.

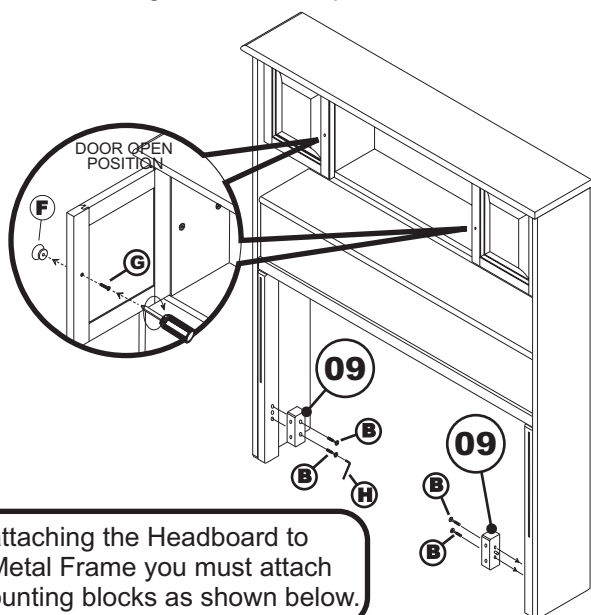

If attaching the Headboard to a Metal Frame you must attach mounting blocks as shown below.

STEP 8

Install mounting blocks (09) to each side of captain's bed as shown. Using JCB (B), tighten with Allen wrench (G)

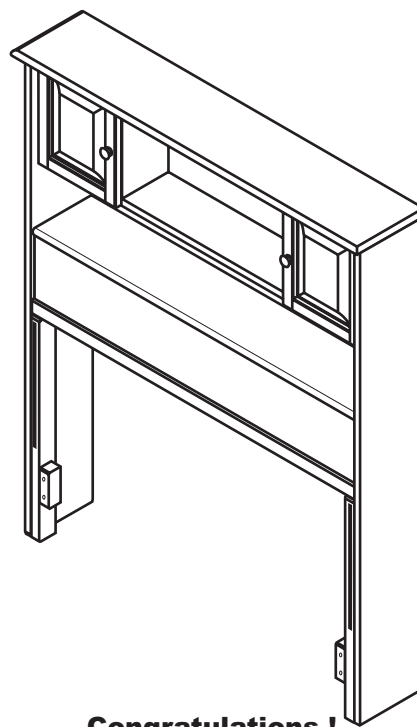

Congratulations !

Your Captain's Bed Headboard is now ready for use.
We recommend that you recheck that all screws are tightened, and that all parts are secure before use and periodically to ensure safety.