





ANTI TIPPING


ATLANTIC
FURNITURE

ASSEMBLY INSTRUCTIONS


Instructions apply for :
> 5 DRAWER > ARMOIRE

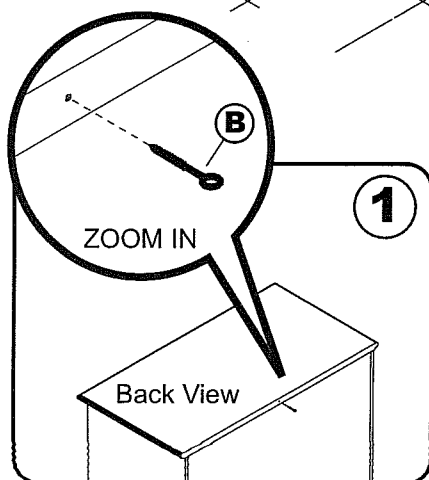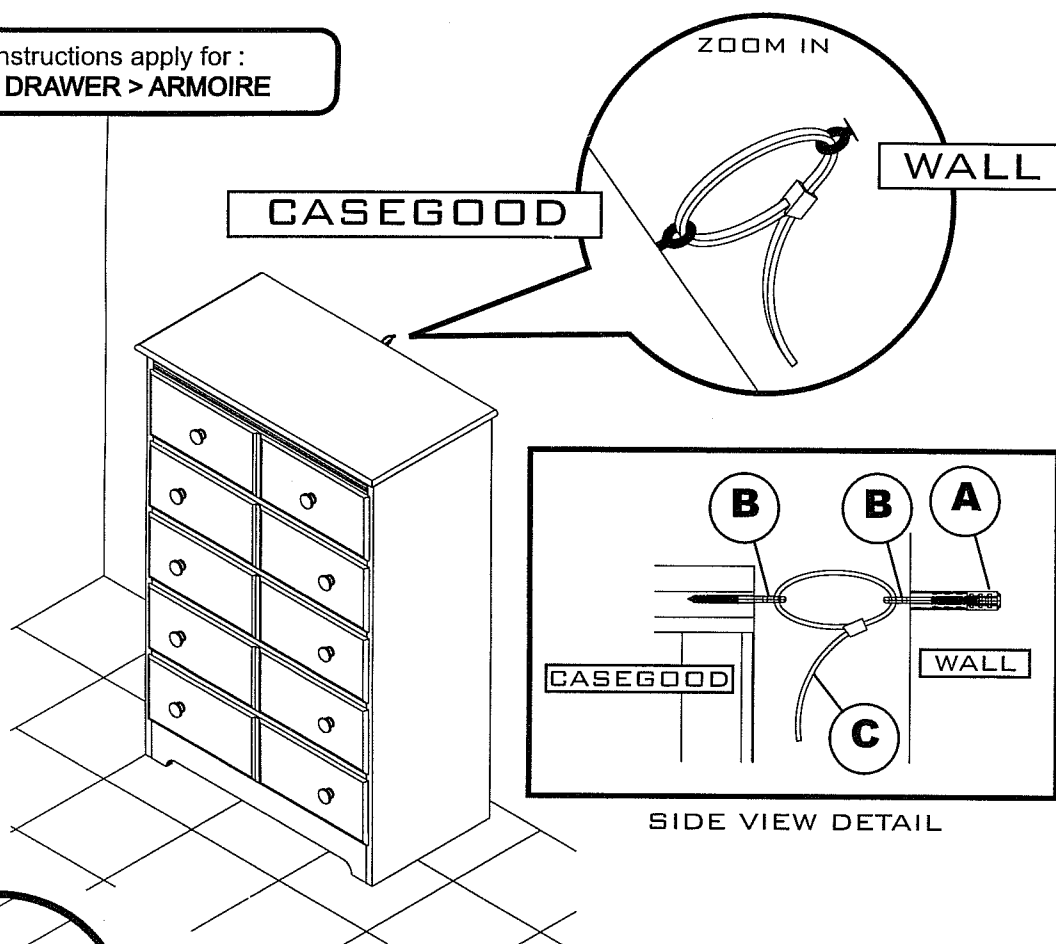

1
Predrill hole in center of Top Panel
and Insert Screw Eye (B) as shown.

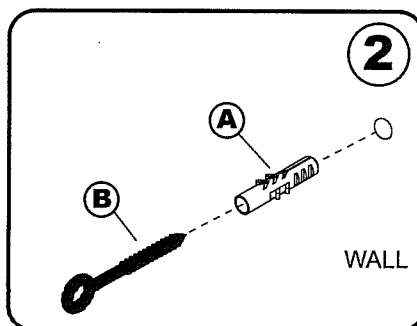


2
Predrill hole in front of Wall and
Insert Wall Plug (A) as shown.

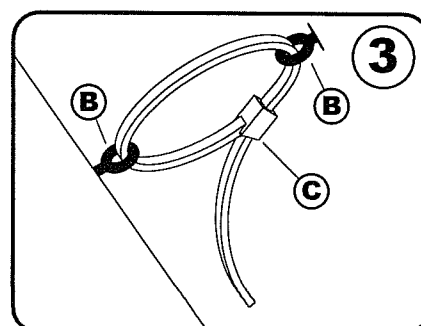

3
Insert Plastic Tie(C) to the both of
Screw Eye(B) as shown.


HARDWARE



(A) Wall Plug 1 pc



(B) Screw Eye 2 pcs

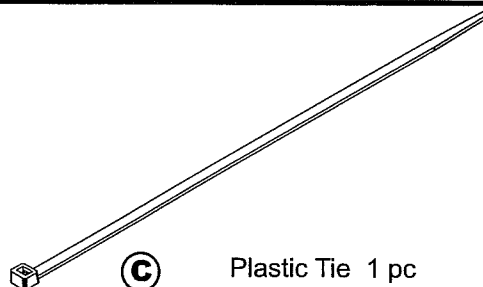

(C) Plastic Tie 1 pc