



MILANO BED DRAWER





ASSEMBLY INSTRUCTIONS

Thank you for choosing our new Milano bed drawer.

This practical design offers the utmost in versatility.

Before assembling your Drawer Bed, please read through these instructions carefully, familiarise yourself with the different parts.

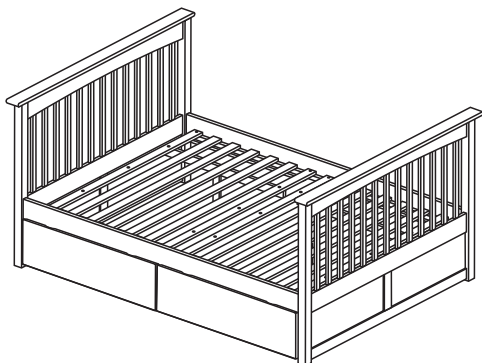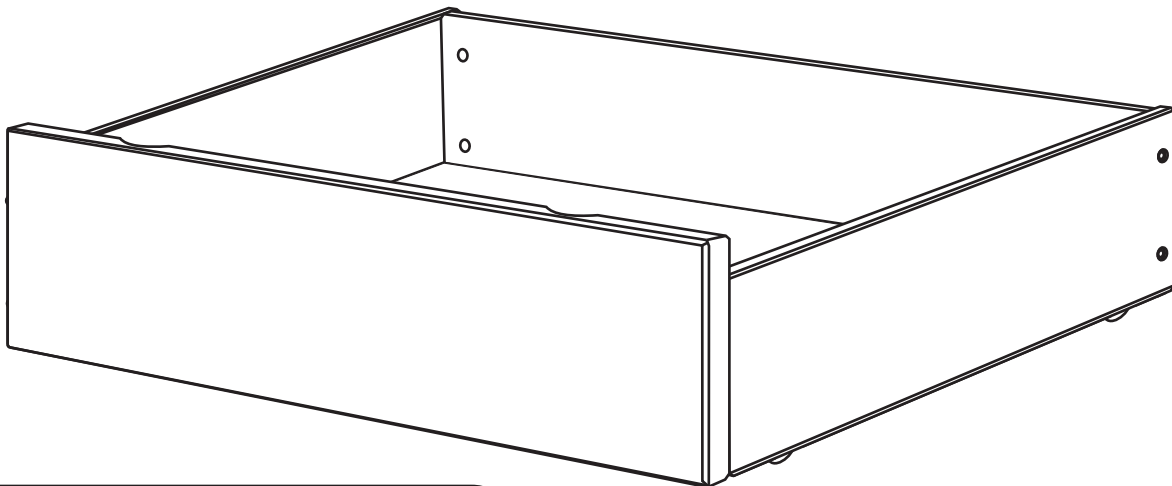

BED WITH BED DRAWER




Assembling by Adult



Allen Key

HARDWARE



A

JCB M6 X 2 1/2" (60mm) - 8 pcs
Fix Drawer side to Drawer Back



C

JCB M6 X 5/8" (15mm) - 8 pcs
Fix Drawer side to Drawer face



B

Barrel Nut - 8 pcs
For JCB M6 X 2 1/2"




D


Allen Key - 1 pcs

PARTS LIST

- | | | | | | |
|-----------|--------------------|--------------|-----------|---------------------|--------------|
| 01 | HARDWARE | 1 BOX | 04 | DRAWER BACK | 2 PCS |
| 02 | DRAWER FACE | 2 PCS | 05 | DRAWER PANEL | 2 PCS |
| 03 | DRAWER SIDE | 4 PCS | | | |

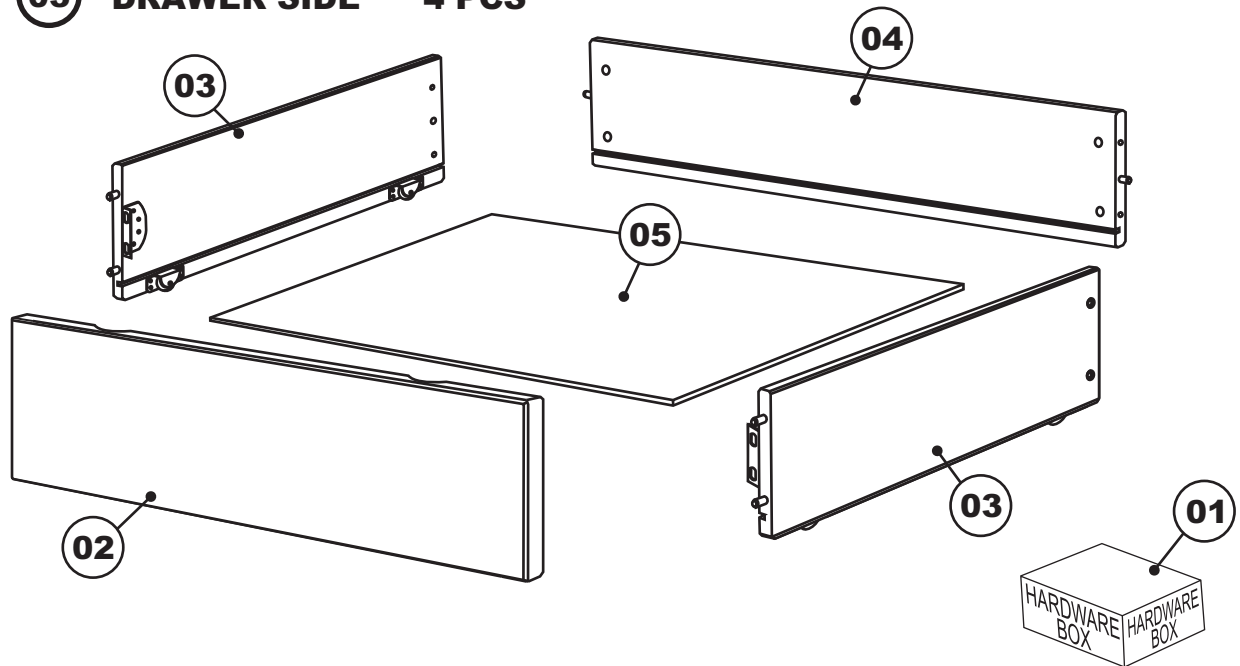

STEP 1

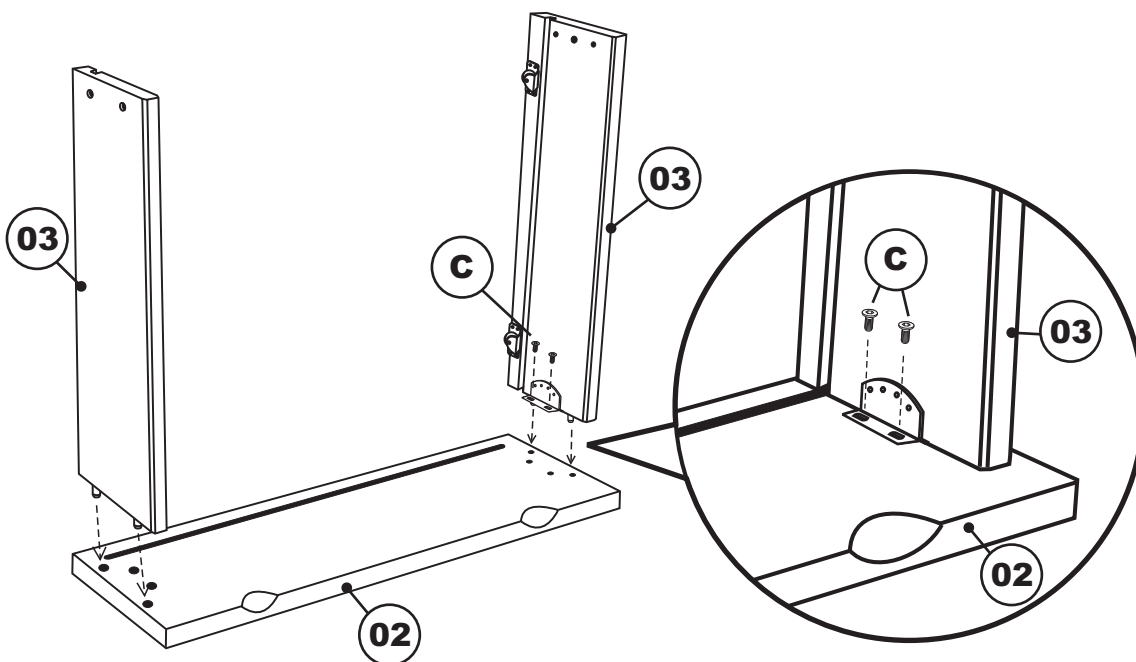


C



JCB M6 X 5/8"


Lay the Drawer Face(02) on smooth, flat surface so the holes and groove are facing upwards. Fit the Drawer Side(03) to Drawer Face(02), fitting the Dowels in the holes. Use JCB M6 X 5/8" (C) to attach the Drawer Side in place, but don't fully tighten these yet. Leave them a bit loose to make fitting the Drawer Back easier.

STEP 2

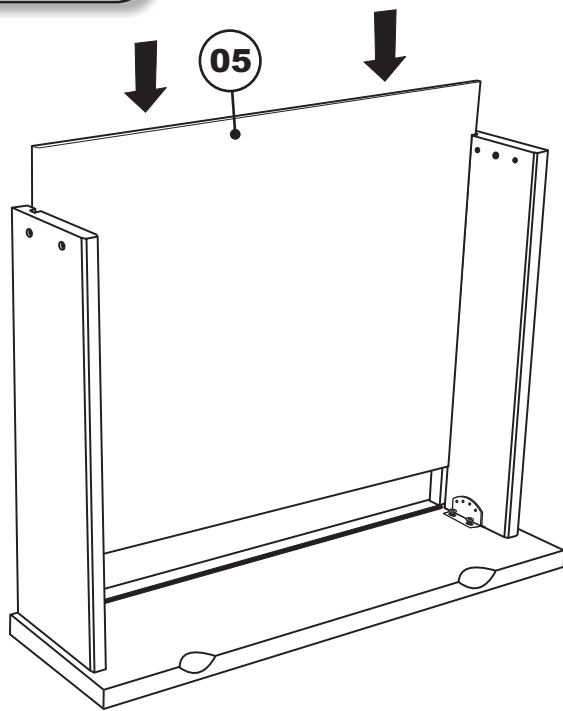


Guide the Drawer Panel(05) in carefully so that it won't jump out of its grooves. Be sure it fits fully into its groove at the bottom(in the Drawer Face) before fitting the Drawer Back.

STEP 3

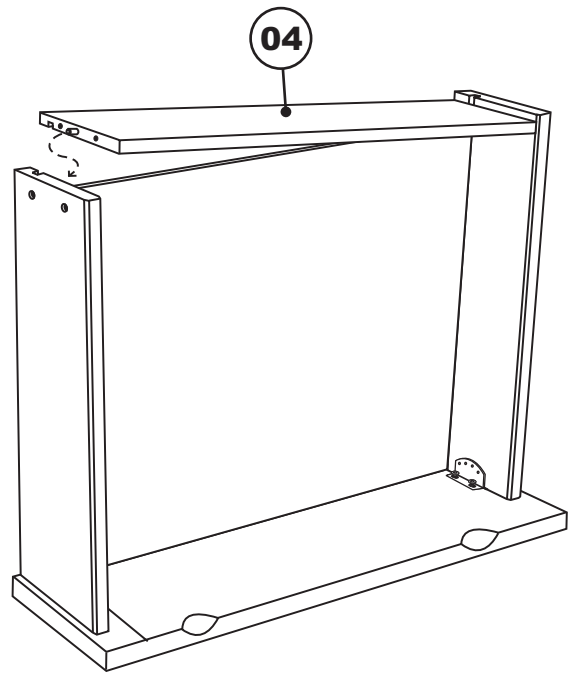


You will need to spread the Drawer side apart a bit to fit the dowels in the Drawer Back into their holes. Do this gently, please! Remember the JCB in step1 must be a bit loose. After this, tighten all the JCB on the Drawer Face.

STEP 4

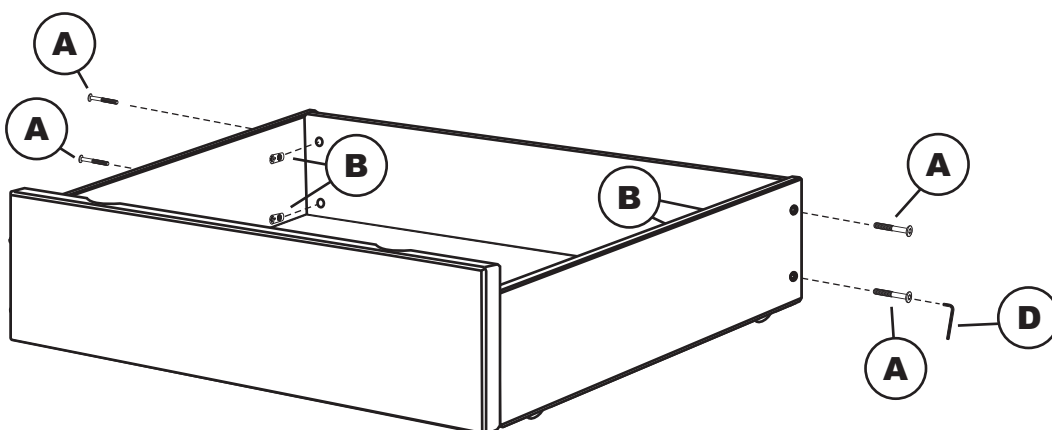

A



JCB M6 X 2 1/2"

B



Barrel Nut

D



Allen Key

Carefully turn the assembled Drawer down, onto its wheels. Using the JCB M6 X 2 1/2"(A) and Barrel Nuts (B), tighten with the Allen Key (D).